



Assembly instructions "Diamond 9" mounting option A. Direct to wall, Anchor mounted

Diamond "D9" 9 bottles

N/B Plaster wall installation shown for Concrete/Brick & Masonry walls replace plaster wall anchor images with Ramplugs. All appropriate fittings will be supplied.




"Diamond 9" Panel 9 bottles

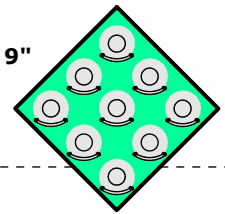


1. Mark the layout dimensions on the wall, select a corner starting point, Position & accurately level Template 1. Drill the 3 Template holes, 4.2mm drill bit supplied. Ensure the template does not move thru the process.

Allow 20mm from the highest template position to any obstruction above.

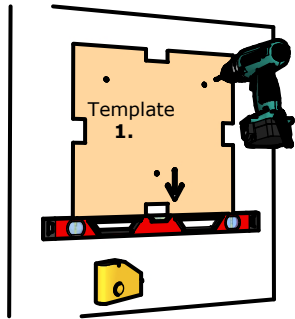


2. Screw in wall anchors until flush. Do not overtighten. If installing single panel go to 5.

Plaster wall anchor
3 per panel

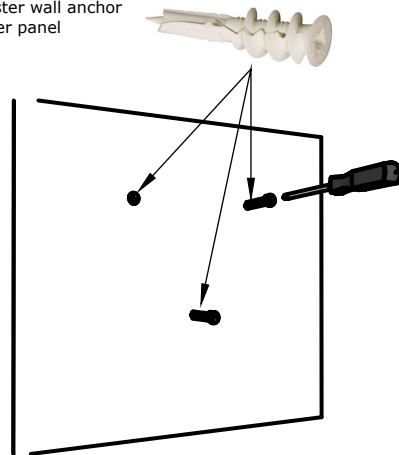


3. To install additional panels reposition Template 1. & insert screws until firm. Do not overtighten.


Threaded anchor screw.
3 per panel

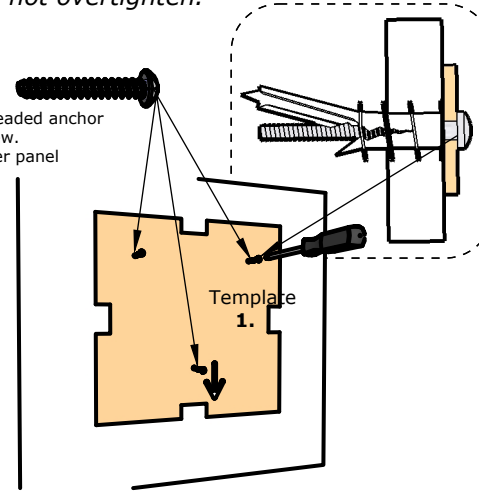


4. Insert Template 2. into next required face on Template 1 & repeat 1&2. To add additional panels remove the template to be moved, repeat the process until the layout is completed.

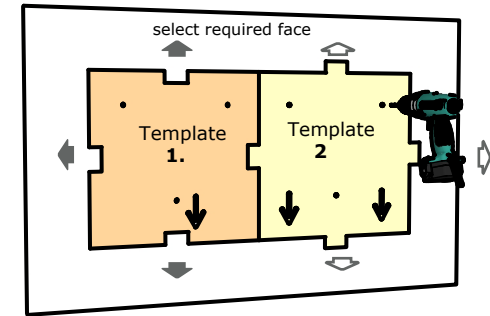


5. Screw in Panel connector assembly into the wall anchors until just firm.

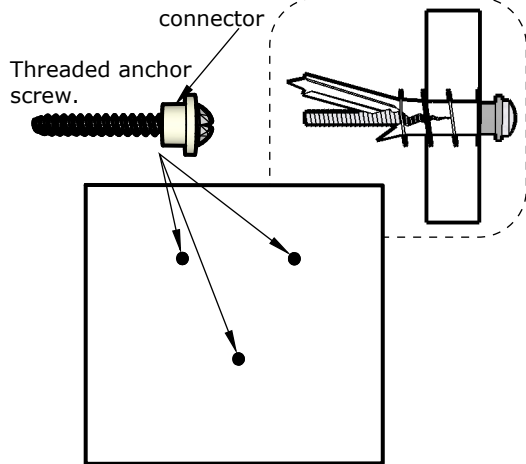


6. Place the panel on a solid flat surface, face up. Insert the Bottle holder brackets using the insertion block, drive in until the block is Firm & Flat with the panel surface.

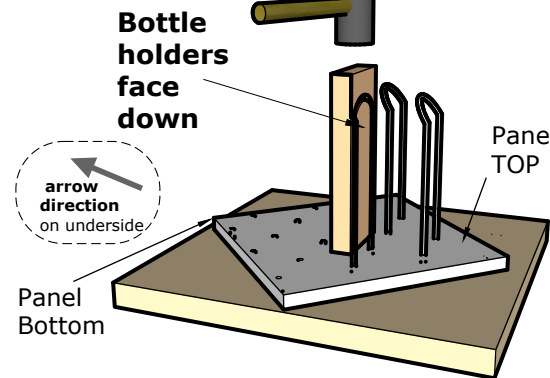


7. Commencing with the lowest panel position, align the panel with the panel connectors, push in & pull down.

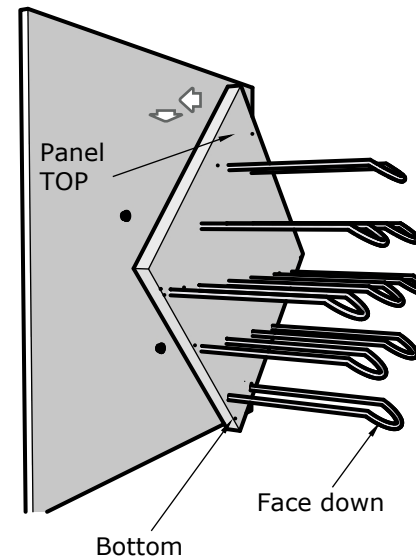

You need:

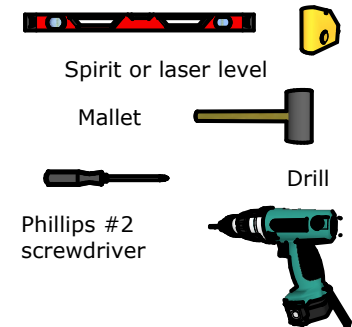

Items supplied:

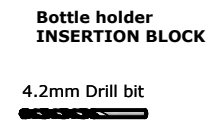

ALL fixing Fittings.

©DISYNER SYSTEMS. All rights reserved.

Liability notice: Disyner Systems is unable to accept any liability for faulty wall conditions or damage to any internal wall components onto which the system is installed. We are unable to accept any liability if the the assembly instructions are not followed exactly as stipulated.